

AIR TO WATER HOME HEAT PUMPS SPARE PARTS

MODEL	SPARE PART NAME
DH32-4F DH32-2F	Four-way valve
DH32-4F DH32-2F	Electronic expansion valve
DH32-2F DH32-4F DH32-5.5F	Press gauge
DH32-2F DH32-4F	Water flow switch
DH32-2F DH32-4F DH32-5.5F	High pressure switch
DH32-2F DH32-4F DH32-5.5F	Low pressure switch
DH32-2F DH32-4F DH32-5.5F	Wire controller
DH32-2F DH32-4F DH32-5.5F	Main board
DH32-4F	Drive board
DH32-2F DH32-4F DH32-5.5F	Drive board and communication wiring
DH32-2F DH32-4F DH32-5.5F	Main board and wire controller communication wiring
DH32-2F DH32-4F DH32-5.5F	Ambient temperature sensor
DH32-2F DH32-4F DH32-5.5F	Inner coil temperature sensor
DH32-2F DH32-4F DH32-5.5F	Outdoor coil temperature sensor

AIR TO WATER HOME HEAT PUMPS SPARE PARTS

DH32-2F DH32-4F DH32-5.5F	Water inlet temperature sensor
DH32-2F DH32-4F DH32-5.5F	Water outlet temperature sensor
DH32-2F DH32-4F DH32-5.5F	Compressor EVI suction temperature
DH32-2F DH32-4F DH32-5.5F	Low pressure economic inlet temperature of auxiliary circuit
DH32-2F DH32-4F DH32-5.5F	Compressor suction temperature
DH32-2F DH32-4F DH32-5.5F	Compressor discharge temperature
DH32-2F DH32-4F DH32-5.5F	Tank sensor
DH32-2F DH32-4F DH32-5.5F	Hot water sensor probe
DH32-2F DH32-4F DH32-5.5F	Shut off valves
DH32-2F DH32-4F	Water pump
DH32-4F DH32-2F	Compressor
DH32-2F DH32-4F	Fan blade
DH32-2F DH32-4F	Fan motor